## **Set-up Instructions**

1) Attach pump to back tube of inflatable, making sure no air is escaping.



2) Double check both legs are zipped up and sealed so no air can escape.



3) Turn it on and shoot! <sup>(3)</sup>

- If there is not enough air pressure for the balls to float, double check that all zips are sealed and that the pump to the back tube connection is also completely sealed.
- When packing up, unzip the legs for air to escape so it's easier to fold up.